




Rev. Date 4/12/22



CAUTION: It is important to read these instructions thoroughly before assembly to avoid potential risk and injury. Familiarize yourself with the inventory of parts and the accompanying illustrations to assure safe and proper assembly.

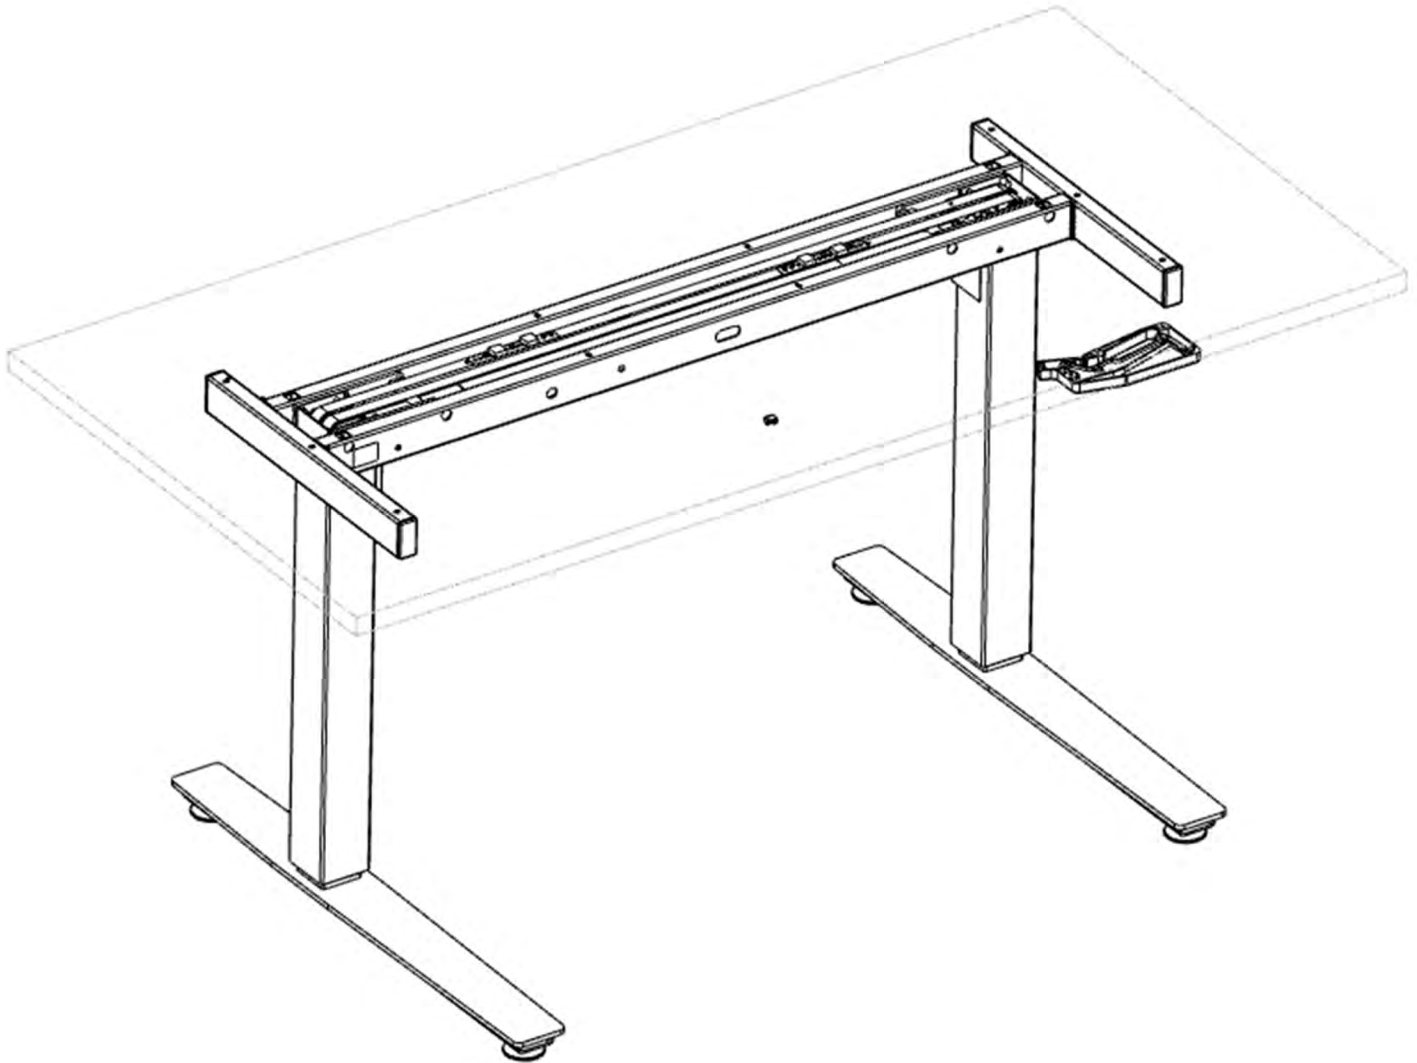

For video install instructions, scan QR Code or go to thestandingdesk.com/install.

Thank you for choosing a high-performance standing desk. It has been manufactured with care and precision and it has passed numerous quality and safety checks to ensure trouble-free and safe operation. You can be assured of lasting satisfaction with your desk model.

Important Safety Information:

1. Assembly and operation of your desk must be done in accordance with these assembly and operating instructions - otherwise there is a risk of injury.
2. The desk is solely intended to serve as an ergonomic adjustment device for desks in accordance with the weights and measurements given in these assembly instructions. Any usage other than that mentioned in these instructions is inappropriate; the manufacturer disclaims liability for any resulting damages. In such cases the user assumes responsibility for all risk.
3. Please also take into account the general, legal and other regulations and legal provisions that are applicable - including those that apply in the operator`s country - as well as the applicable environmental protection regulations. The regulations of trade associations or other supervisory authorities that are in force locally must always be observed.
4. The manufacturer cannot be held responsible for any losses or damage resulting from unauthorized modifications to the desk.
5. Keep the assembly and operating instructions near the device.
6. Never leave children unattended with this base. Children can not properly evaluate the hazard presented by the force action of this base.



Please pay attention to these assembly and operating instruction to avoid a risk of injury!



There is considerable risk involved in improperly constructing, setting up and using the retracting compression spring columns that are under compression. Therefore it is compulsory to adhere to all safety requirements in this assembly guide and instruction manual. You are thereby providing for your safety as well as the safety of others.

When setting up the table the necessary room and safety distances to adjacent parts/furnishing objects must be observed. As The Nimbus is placed among other items, the regulations of trade associations or other supervisory authorities that are in force locally have to be considered.

Children or other persons unable to understand or appreciate the dangers involved are not allowed in the assembly area during construction and set up of the table, which should be conducted by qualified personnel.

This equipment is not intended for use by persons, including children, with limited physical or mental capabilities or insufficient experience and/or insufficient knowledge.

The compression spring table is intended for proper use in commercial office and administrative areas.

It must be ensured that the loading on the compression spring table matches the set spring force.

After setting up the table, ensure that this assembly guide is always visible and accessible to other users. If necessary, inform others of their responsibility.

Lifting capacity: maximum weight: Between 40lbs and 50lbs depending on user preference.

For video install instructions go to thestandingdesk.com/install

Cleaning recommendations for powder-coated surfaces

For optimal care and cleaning of powder-coated surfaces the recommendations below should be followed:

- Use only a soft cloth or industrial cotton wool. Refrain from rubbing hard.
- Surface and cleaning agent temperatures <25°C. (Do not steam clean surface.)
- Clean stains with a damp soft cloth. Use cold or lukewarm water. Small amounts of neutral or alkaline detergent additives may be used if necessary.
- Do not apply detergent for extended periods of time. If necessary repeat cleaning process after 24 hours. Wipe with cold water immediately after cleaning. (Use a damp (not wet) cloth.)
- Do not use scratching or abrasive agents.
- Do not use acidic or strongly alkaline detergents.
- Do not use organic solvents which contain ester, ketone, alcohols, aromatic compounds, glycol ether, halogenated hydrocarbons or similar substances.

NOTE: Do not lubricate or use cleaning agents on the dry guides in the guide columns. Never use any silicone products as this can lead to squeaking of the guide columns.


 WARNING	
	AVOID INJURY - Do not remove strapping until the base is placed on the work surface risk of pinch point. - Do not activate the release lever before the table is fully assembled and in the upright position. - Table leg column may extend suddenly with great force and speed, which will damage the table and could cause serious injury.

 WARNING	
	RISK OF INJURY. Legs extend suddenly. DO NOT remove safety lock pins unless table is fully assembled and in upright position. DO NOT activate release lever unless table is fully assembled and in upright position, or legs are fully extended. READ and follow directions to assemble table. SAVE Pins and RE-INSERT when legs are fully compressed BEFORE transporting table.

 WARNING	
	RIESGO DE LESIONES. Las piernas se extienden de repente. NO retire los pasadores de seguridad a menos que la mesa esté completamente ensamblada y en posición vertical. NO active la palanca de liberación a menos que la mesa esté completamente ensamblada y en posición vertical, o las patas estén completamente extendidas. LEA y siga las instrucciones para armar la mesa. GUARDE los pasadores y VUELVA A INSERTAR cuando las patas estén completamente comprimidas ANTES de transportar la mesa. RISQUÉ DE BLESSURE. Les jambes s'étendent soudainement. NE PAS retirer les goupilles de verrouillage de sécurité à moins que la table ne soit complètement assemblée et en position verticale. N'activez PAS le levier de déverrouillage à moins que la table ne soit complètement assemblée et en position verticale, ou que les pieds ne soient complètement déployés. LISEZ et suivez les instructions pour assembler la table. ÉPARGNEZ les goupilles et REINSÉREZ lorsque les pieds sont complètement comprimés AVANT de transporter la table.

1

Place work surface on floor. Set table base assembly on top of work surface. Remove packaging wrap once the frame is placed on the work surface

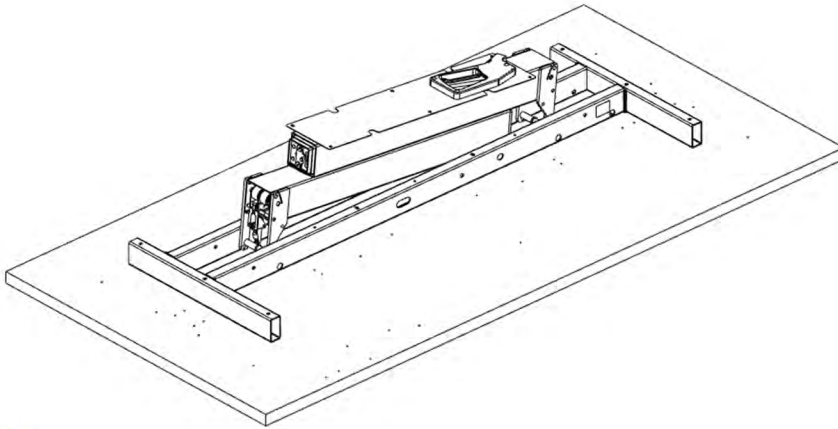

CAUTION: Never activate the manual release before the table is completely assembled and standing properly on the floor. Otherwise there is a safety risk when extending the unloaded columns.


TOOLS/
ACCESSORIES



2

Lift legs perpendicular to the frame.

Note: moving the frame to the edge of the work surface makes it easier to install the leg bolts (next step).

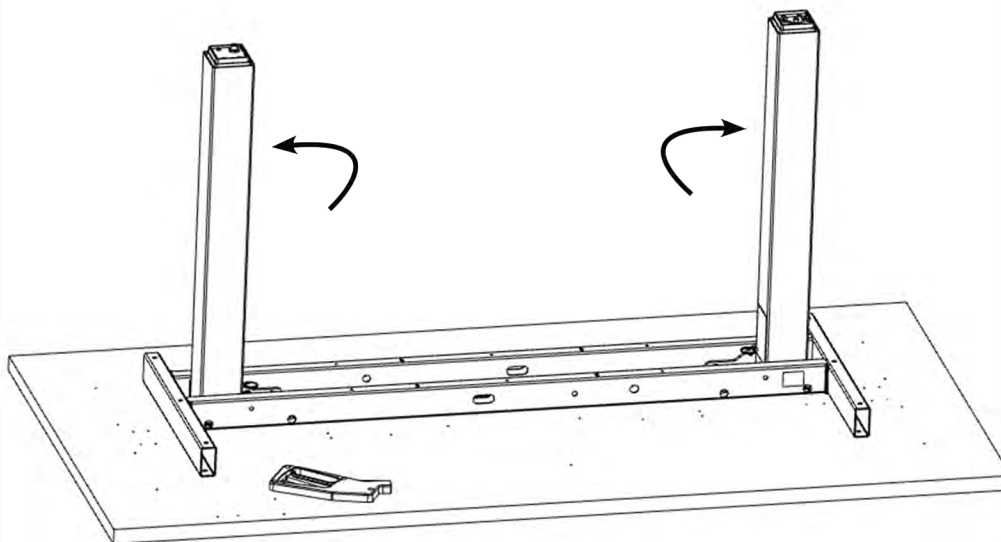

TOOLS/
ACCESSORIES




THE STANDING DESK

3

Move table base to front or rear of the work surface and slightly overhang the table frame to install front or back leg bolts.

Front View

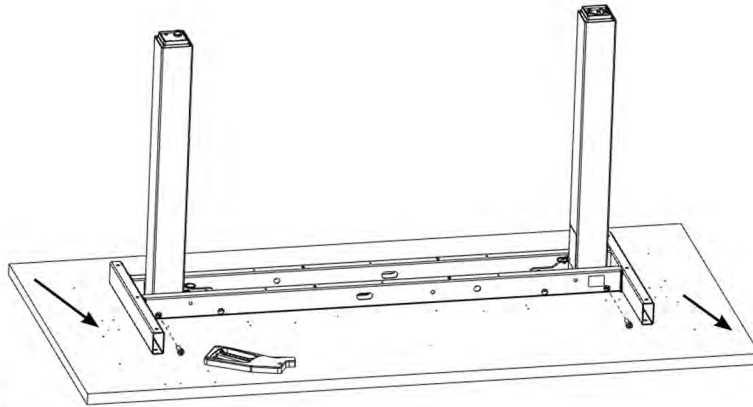


CAUTION: Do not remove the safety pins until the table is completely assembled.

TOOLS/
ACCESSORIES




4

Rear view. Tighten front and back bolts (4 total).

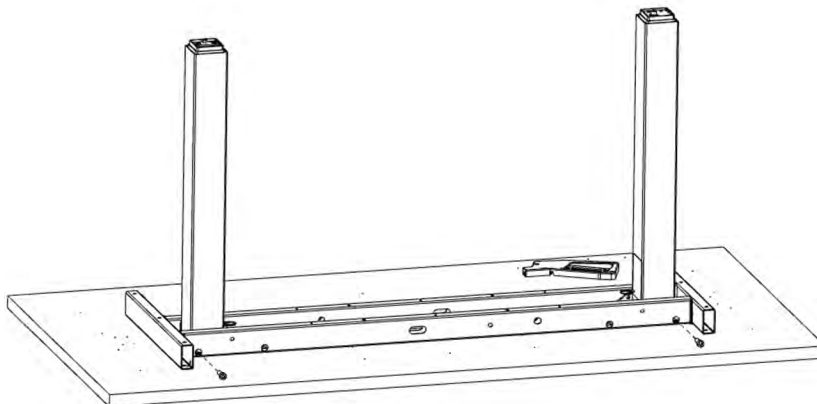

TOOLS/
ACCESSORIES

m8x22




4x

m6



5

Align table base with predrilled holes on work surface. Secure base to work surface with screws.

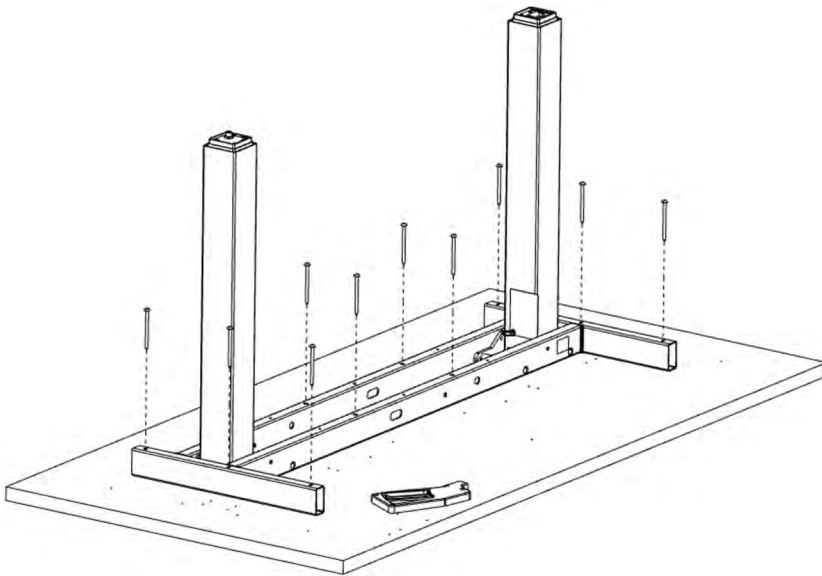


TOOLS/
ACCESSORIES

#12x2




10x

Phillips head
screw driver



6

Install tube caps.

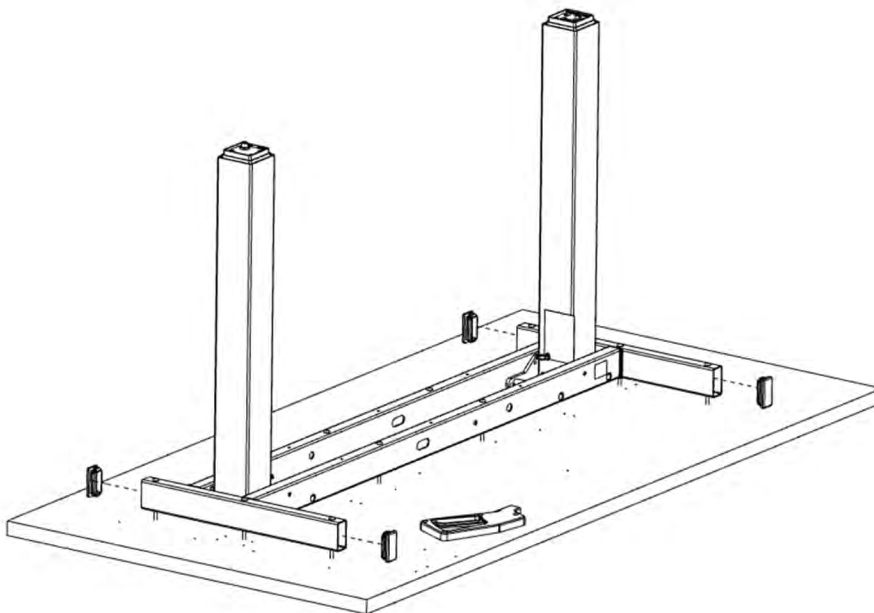

TOOLS/
ACCESSORIES

End cap




4x



7

Install handle to work surface with screws. Attach Bowden Cord with Bowden Cord Clip to work surface.


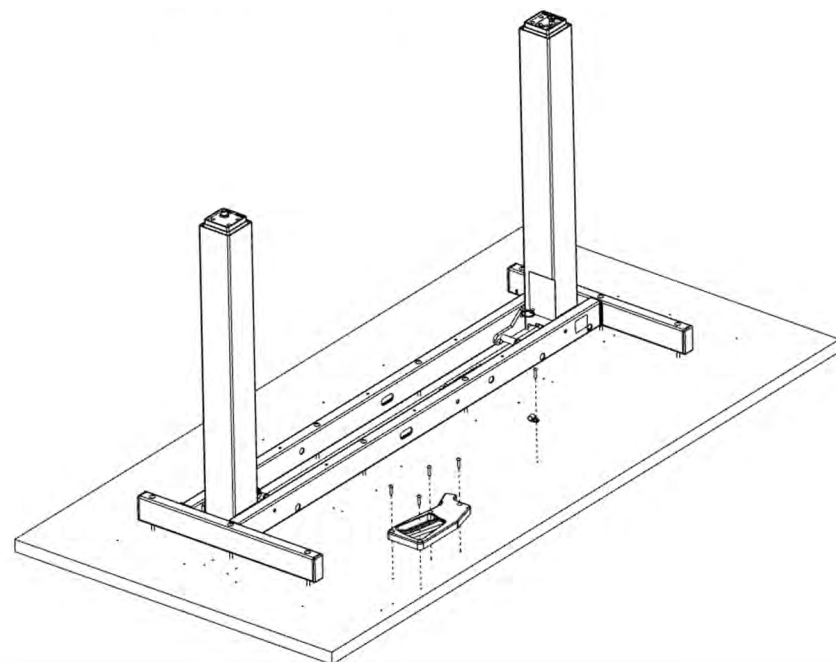


TOOLS/ ACCESSORIES

#8x.5




5x

Bowden
cord clip

8

Attach feet with bolts. Use the single counter sunk bolt in the threaded nut position on the leg as shown.

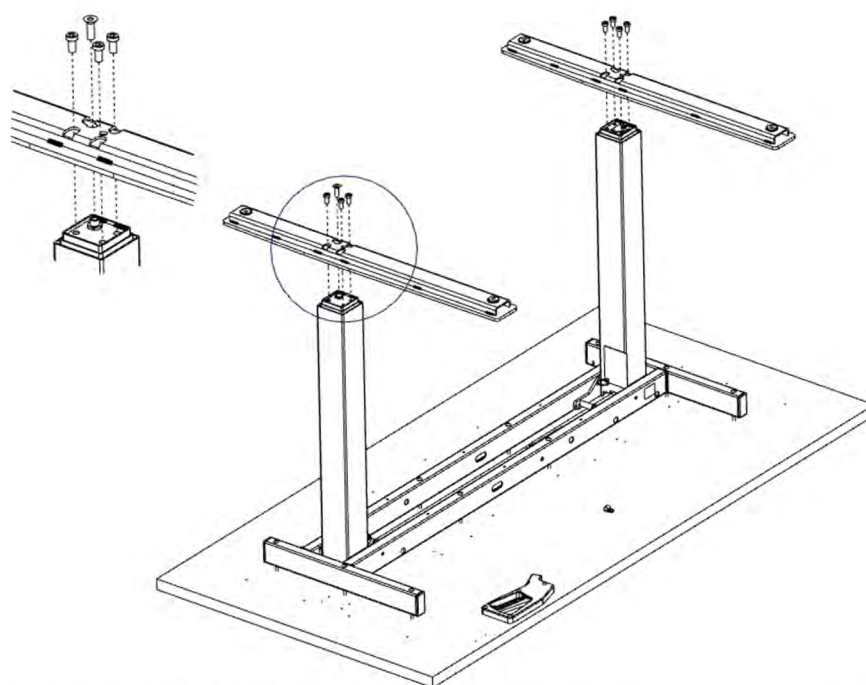

TOOLS/ ACCESSORIES

m8x16



7x

m8x25
countersunk

1x

m5




For video install instructions go to thestandingdesk.com/install

THE STANDING DESK


9

Screw in glides clockwise and tighten with flat head screwdriver. (OPTION - Install locking casters in the front of table and non-locking casters in rear of table with wrench.)

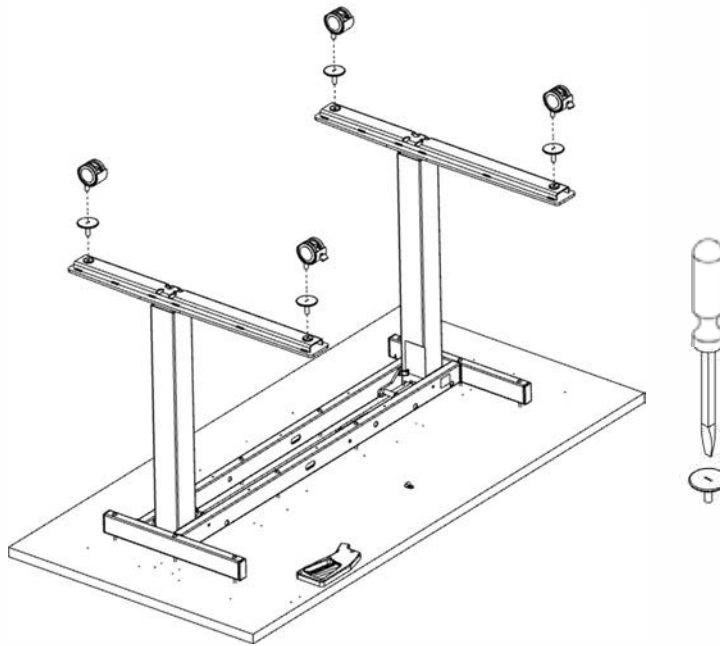

TOOLS/ ACCESSORIES

Glides

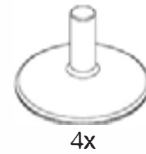

4x

(Option)

Locking
Casters


Non-Locking
Casters



2x




2x

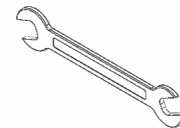

1/2"

10

Attach cover using 6 Xmas tree clips and flip the table over.

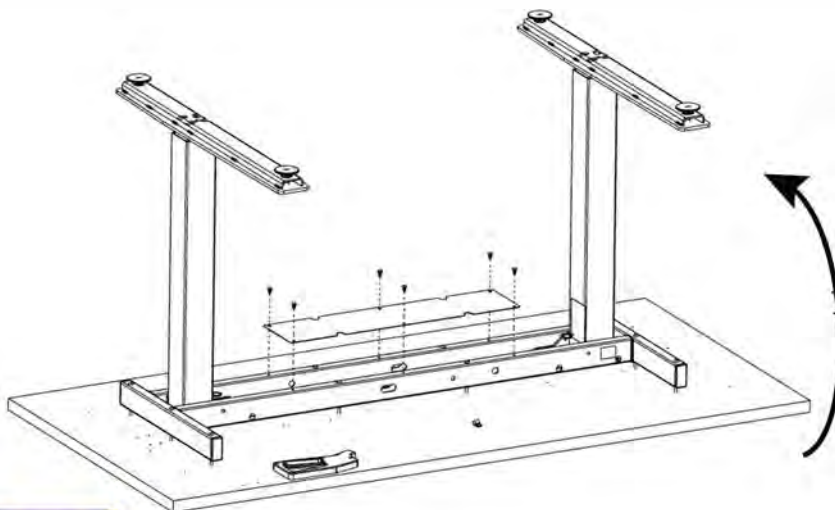

HEAVY OBJECT: Two person lift required.

TOOLS/ ACCESSORIES


Xmas tree
fasteners



6x

THE STANDING DESK

11 Remove pin from each column.

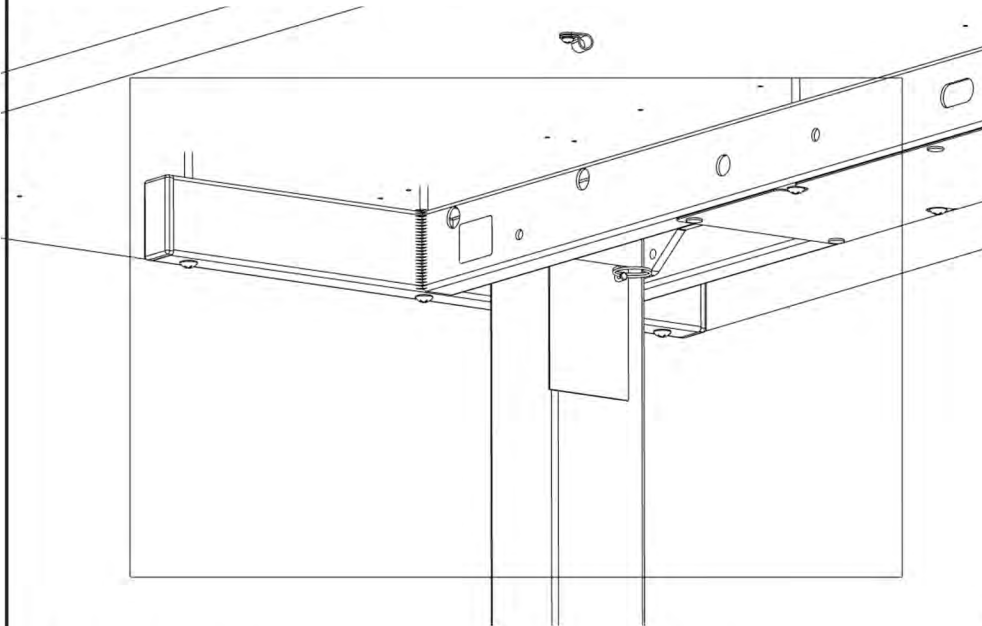

If pin is stuck, apply light downward pressure to the table top.

TOOLS/
ACCESSORIES



12 Lightly press one hand onto the tabletop and activate the lever with the other hand until the table is at the desired height.



TOOLS
ACCESSORIES



For video install instructions go to thestandingdesk.com/install

REFERENCE

29"x59" Work surface mount hole diagram.

